

EXPORT LIMIT SETTINGS

Using Export Power Manager (EPM)



Ginlong Technologies Co., Ltd.

SETTING UP EXPORT LIMIT USING EXPORT POWER MANAGER (EPM)



STEP 1: Press Enter on the EPM.

STEP 2: Scroll down to 'Advanced Settings' using the Up/Down keys. Press Enter.

Type the password - <0010> and click Ent.

You will see the following options.

Select Advanced Settings from the Main Menu to access the following options:
1. Inverter Qty. Set 2. Backflow Power 3. Set Meter CT 4. FailSafe ON/OFF
5. Backflow Work Mode 6. PELD ON/OFF 7. System Updade 8. Reset Password
9.Restore settings 10.Set EPM Regulator

STEP 3: Set the inverter quantity by selecting the 'Inverter Qty' option. Press **Ent** to save.

STEP 4: Select 'Backflow Power' and Press Enter.

Define the Backflow power as per your requirement using the Up/Down keys. Press Enter to select and save.

STEP 5: Select 'Set Meter CT' to define the CT ratio parameter. For example, if your CT clamp rating is 100A/5A then the ratio is 20:1. Press Enter to select and save.

STEP 6: Press ESC twice to exit.

'ALL DONE'

HAVE A GOOD DAY!