

EXPORT LIMIT SETTINGS

Single and Three Phase Meter




Ginlong Technologies Co., Ltd.

SETTING UP EXPORT LIMIT USING A METER


STEP 1: Press Enter on the inverter screen.




STEP 2: Use Up/Down keys to go to advanced settings and press Enter.

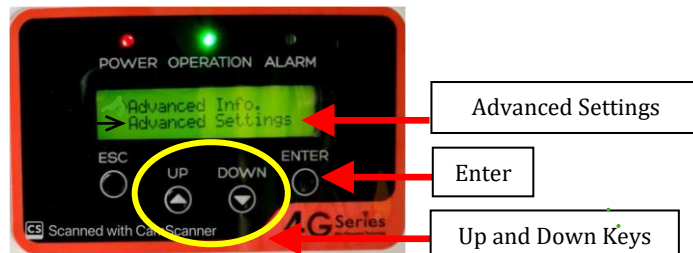


STEP 3: Press Down key twice and up key once, to type the password as 0010. Then press Enter.

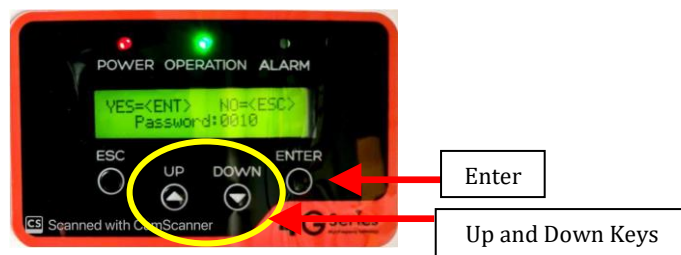

STEP 4: Use the Up/Down keys to scroll to Grid ON/ Grid OFF. Then press Enter.

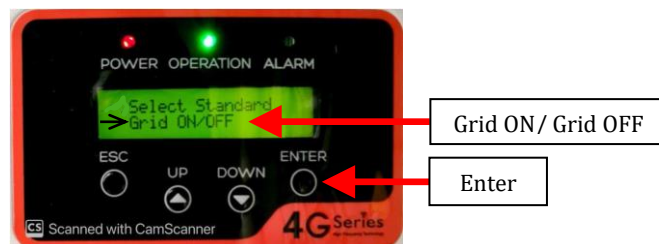


STEP 5: Select the Grid OFF option and press Enter. You will see the operation light turn OFF.

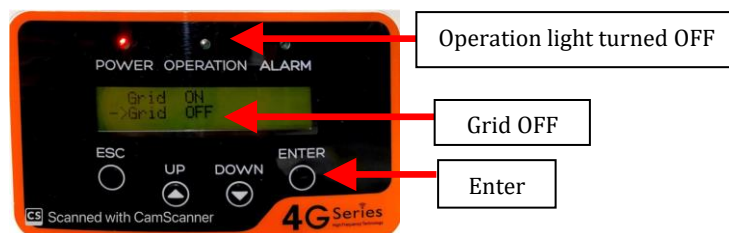

STEP 6: Use Up/Down keys to scroll to EPM settings/ Internal EPM/ Export Power Set, whichever is available on your screen. Then press Enter.




STEP 7: Go to Backflow Power and press Enter.

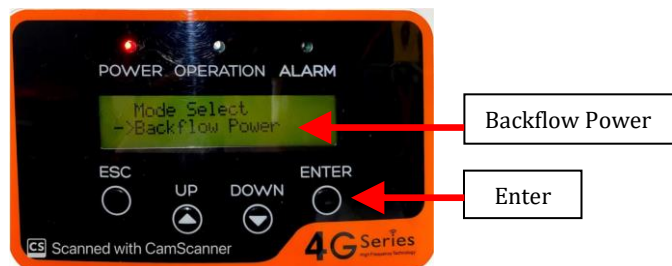

STEP 8: Use the Up/Down keys to set the Backflow power according to your requirements.

For Example: If your export limit is 5kW you need to set Backflow power as 5000W or +5000W. Press Enter.

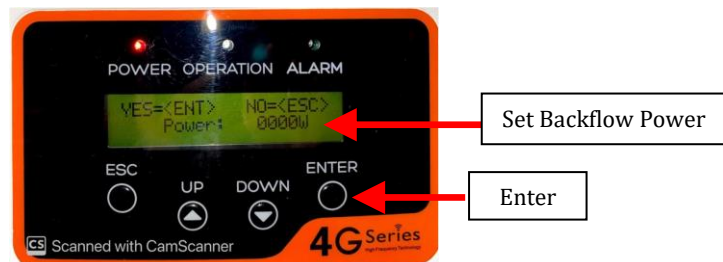

STEP 9: Use Up/Down keys to find Mode Select. Press Enter.

Use Up/Down keys to select 'Meter in Grid'.

Press Enter to Save and you will see a message on the screen as "DONE!".

STEP 10: Now turn the Grid ON in Advanced Settings.

(Go to Advanced Settings by pressing ESC thrice < Set password 0010 < Go to Grid ON/Grid OFF < Select Grid ON < Press Enter).

STEP 11: Press ESC to exit to the main screen. The status displayed will be LYMBYEPM, which indicates you have successfully set up the export limit.

"ALL DONE"

HAVE A GOOD DAY!